

Quick Start Guide

Version 1.03

Document Title	Assistant Telematics Quick Start Guide
Version	1.03
Date	2026 08 01

Contents

Open Configurator (browser Chrome)	3
Login to Configurator	3
Select COM port	3
Devices default password	4
Update devices firmware	4
Update over cable via Configurator	5

Open Configurator (browser Chrome)

Assistant Telematics product is configured via a browser. We recommend use “Chrome”. Press below link:


<https://configurator.iot-at.com/device/set.htm>

Login to Configurator

In the window that opens, you will need to enter login details.


Username – “iotat”


Password – “iotat”

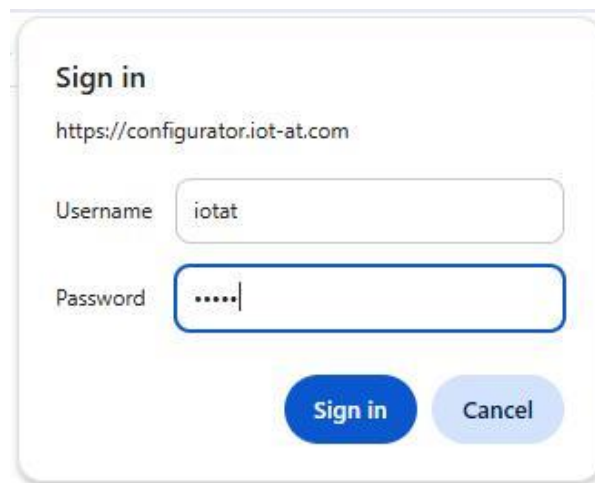A sign-in dialog box with a title bar. The title is "Sign in". Below the title is the URL "https://configurator.iot-at.com". There are two input fields: "Username" with the text "iotat" and "Password" with masked characters ".....". At the bottom are two buttons: "Sign in" (dark blue) and "Cancel" (light blue).

Select COM port

After entering the correct login details, you need to select the correct port to which you connected the configuration cable – press Select (Serial Port).

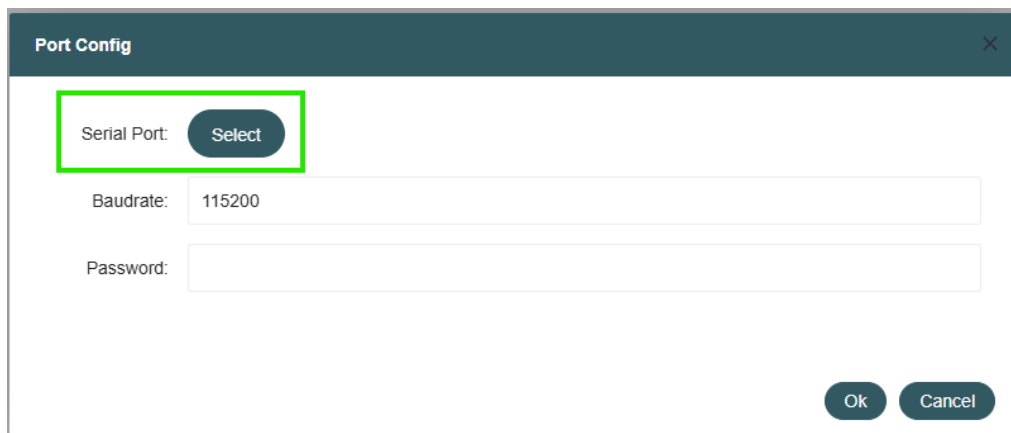
A "Port Config" dialog box with a dark header bar containing the title "Port Config" and a close button. The main area has three sections: "Serial Port:" with a "Select" button (highlighted by a green rectangle), "Baudrate:" with a text field containing "115200", and "Password:" with an empty text field. At the bottom right are "Ok" and "Cancel" buttons.

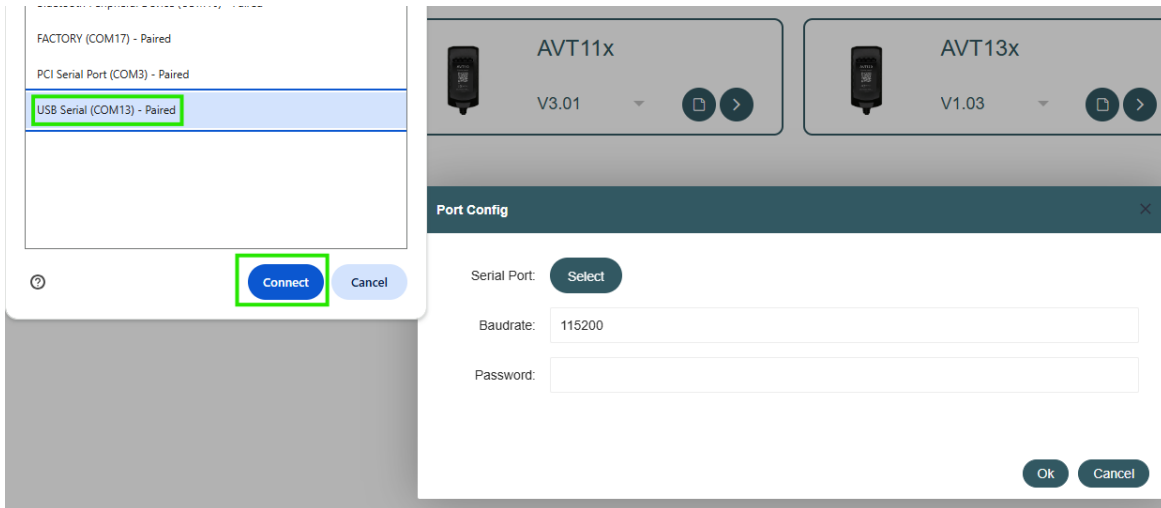

Note: To ensure the correct port, follow in Windows Device Manager, our driver is USB – SERIAL CH340 (COM X).

Devices default password

Assistant Telematics devices default password is “at”. Enter the password “at” in the field and press “OK, and you able to configure units.

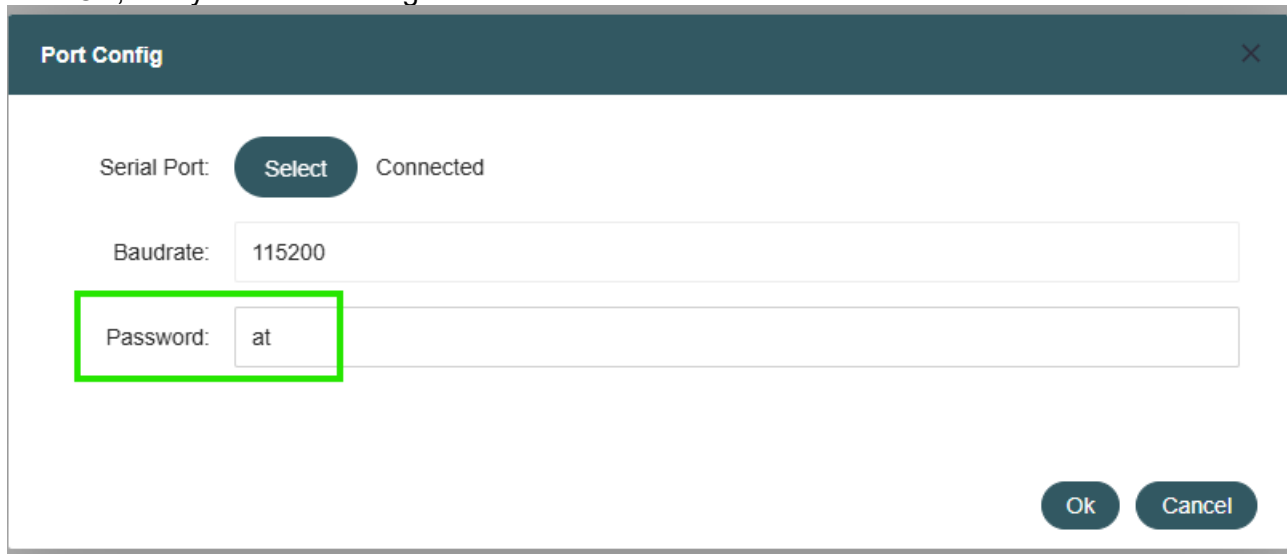


Update devices firmware

Assistant Telematics products have two MCU chipset. To update the firmware, mainly you need to update Main MCU firmware (firmware called AxxVxx with extension*.bin), product like AVT11x also has CAN chipset inside and it has CAN separate fw. In rare cases, you need to update the modem fw


or boot loader fw. The update process can be performed via MT (cable), via a special program designed for batches, or remotely via the AT@UPF command or via AT-RMS platform, document (Assistant Telematics Remote Management System_1.05.pdf).

Update over cable via Configurator

Connect device to cable, open MT <https://configurator.iot-at.com/device/set.htm> , login with credentials `iot/iot`, enter device password, default - `at`, and press Firmware Upgrade button on the right side.

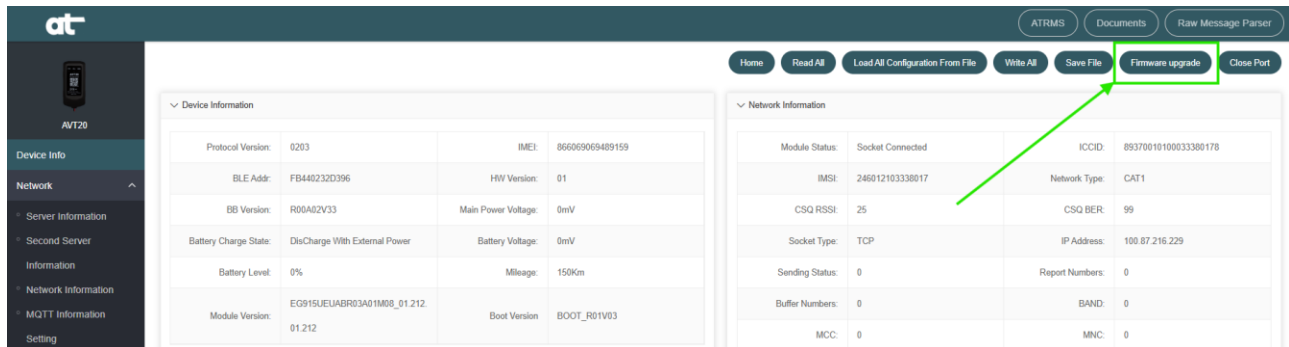

Select Main MCU, then choose firmware file *.bin AxxVxx (example AVT20_R00A02V33_APP.bin) and press Start button.

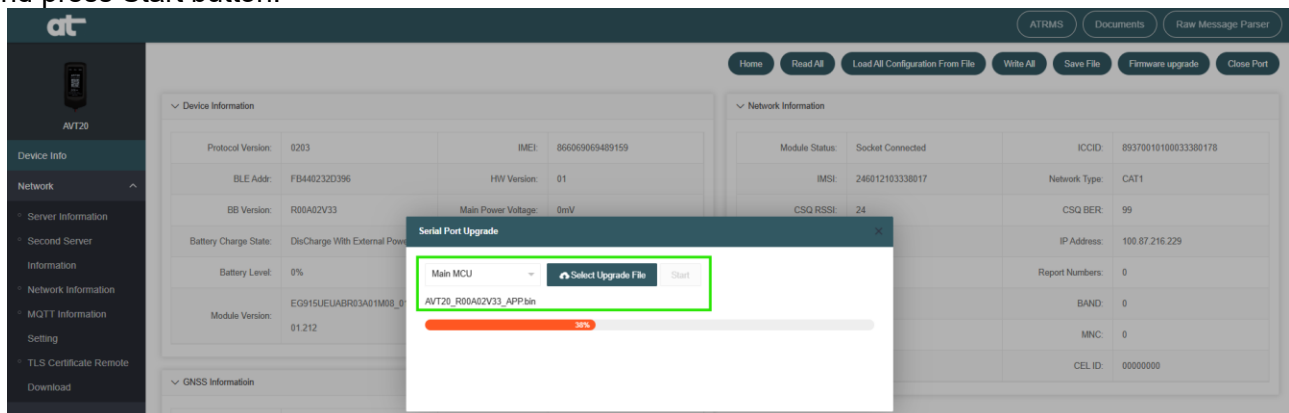

Note: All firmware can be updated via cable via MT-Configurator, via special software tool for batches, as well remotely using AT@UPF command using a personal http server, or AT-RMS platform.